

RESPIRO R8 compact

NEW!



EN.R8.FLY23.1

FROM 100 HP - THE PERFECT START FOR THE FARMER

REITER
www.reiter-respiro.com

RESPIRO - THE REVOLUTIONARY TECHNOLOGY COMBINES PERFORMANCE,

PICK-UP TECHNOLOGY MAKES THE DIFFERENCE

FLEXIBLE

Best ground hugging via sliding discs close to the tine
cleanest basic forage - best raking quality

CAMLESS

Maintenance-free and simple

SMALL

The small pick-up diameter works perfectly with
the crop flow - forage protection & performance

TRAILING TINES

Passive position, no aggressive ground contact
Durability of the tines - no foreign objects


CONVEYOR ROTOR WITH CROP ROLLER

Central adjustment of the roller downholder
Perfect crop flow results in high output

R8 compact

THE HIGHLIGHTS

- ✓ Lightweight version from 100 hp
- ✓ 4-wheel chassis, perfect smoothness and weight distribution
slope capability & best ground adaptation
- ✓ Manoeuvrability due to 90° steering angle
- ✓ Single lift
- ✓ Patented suspension of the working units
- ✓ Easy & fast folding; safe during transport
- ✓ Raking height adjustment and adjustment of belt speed from
the tractor cab as well as automatic belt adjustment and belt
stop
- ✓ Conveyor rotor like profi machine

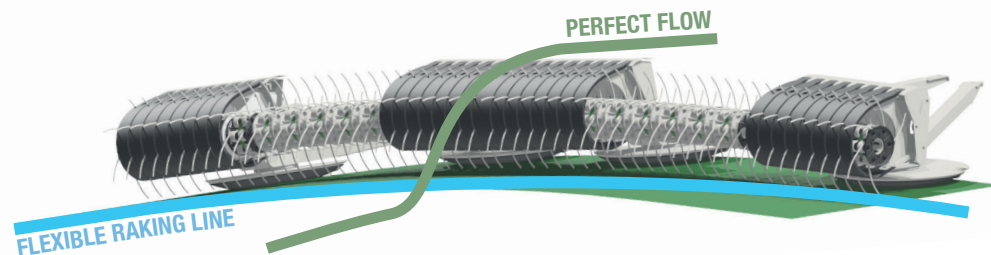


Specially developed for the intake of thin feed mats & swaths





QUALITY AND FLEXIBILITY



**MORE
PROFIT
IN THE
STABLE**

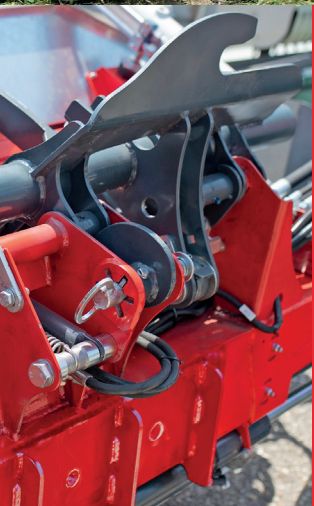

**BEST
FEED QUALITY
& FLEXIBILITY**

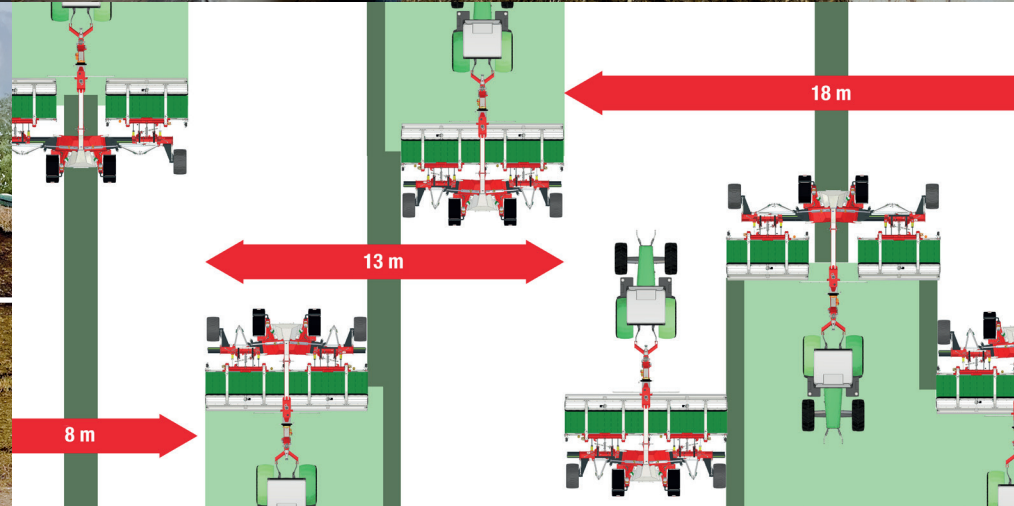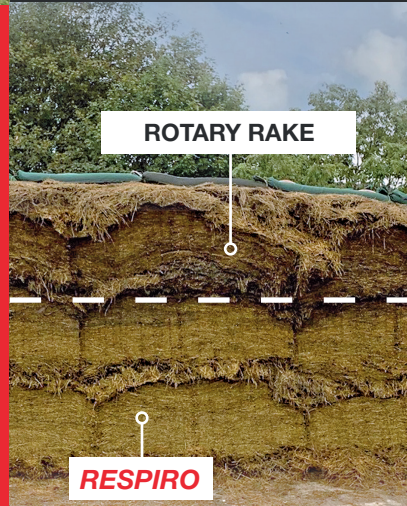

**Always the right
swath size for all
yields and forage types**

Best performance, cutting quality
and productivity for the
following harvesting machines
Balers, loader wagons and
self-propelled forage harvesters.



**6 possibilities for
swath placement**

- ✓ centre
- ✓ side left / right
- ✓ half side swath
- ✓ 2 single swath left / right

THE JOY OF RAKING

...from New Zealand to Canada,
from South Africa to China...

RESPIRO - recognised worldwide by leading companies



INTEREST AWAKENED?

We are looking forward
to your request!

TECHNICAL DATA

| | |
|---------------------------------|------------------------|
| Working width centre swath [m] | 6.50 - 8.00 |
| Swath width [m] | 0.50 - 2.00 |
| Working width side swath [m] | 6.00 + swath |
| Conveyor belt width [mm] | 1000 |
| Transport length [m] | 5.60 |
| Transport width [m] | 2.92 |
| Transport height [m] | 3.40 |
| Weight [kg] | 4400 |
| Tyres | 480/45-17 |
| Aera output [ha/h] | 3 - 8 |
| PTO shaft [rpm] | 540 / 750 / 1000 |
| Required hydraulic connections | 2 DA + load sensing |
| Required electrical connections | ISOBUS, 7-pin plug |
| Brake | air brakes / hydraulic |



RT Engineering GmbH
Eben 5a, 4716 Hofkirchen a.d.T.
Austria

Tel.: +43 7248 66 717-0
E-Mail: office@reiter-respiro.com
www.reiter-respiro.com



@RT.Engineering.GmbH



@reiter_respiro_official



ReiterInnovativeTechnology

RESPIRO - Pastures, animals, machines and men respire