

RESPIRO

The technology



RESPIRO –

The diversity of applications



Field crop



Straw



Permanent grassland




Hay

Pastures, animals, machines
and men respire ...

RESPIRO – The heart

Anti-loss System

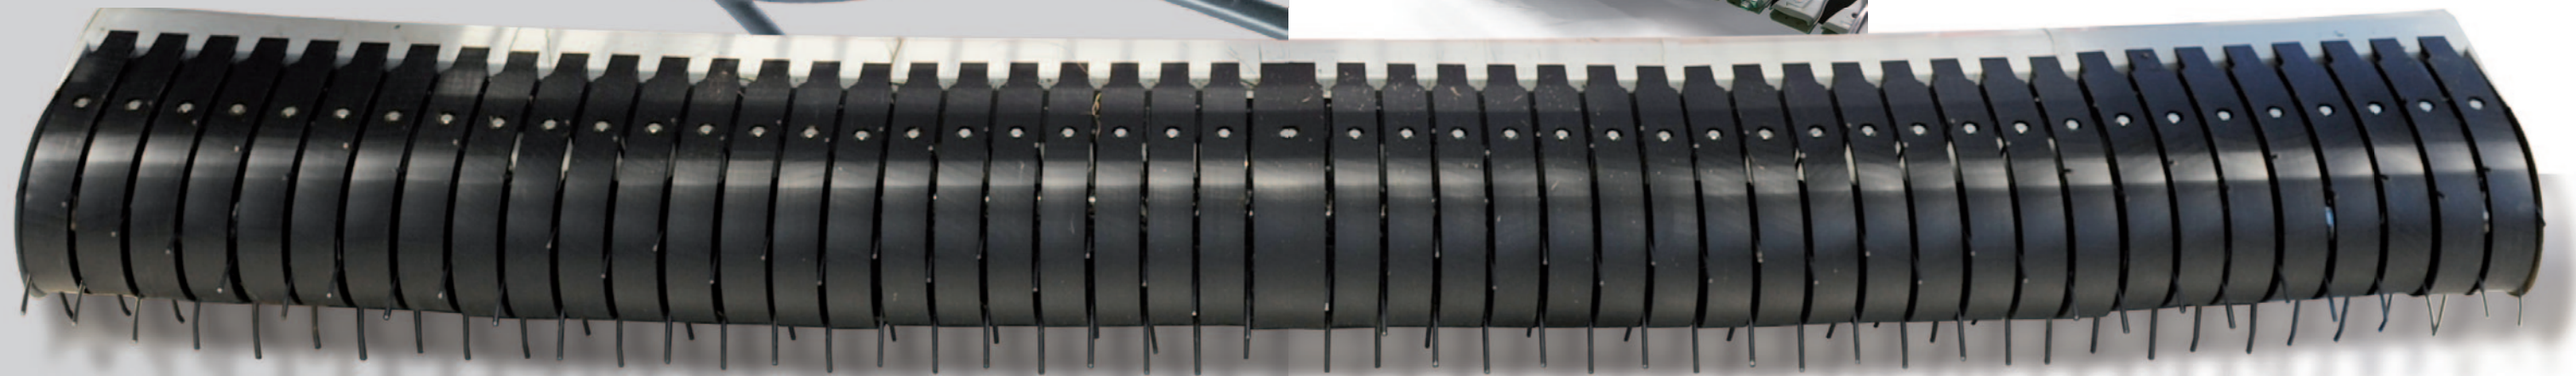


bendable – clean basic fodder – less wear – more performance

The technology



Uniform swath

in all conditions thanks to a small pick-up and a roller, even at high working speeds.

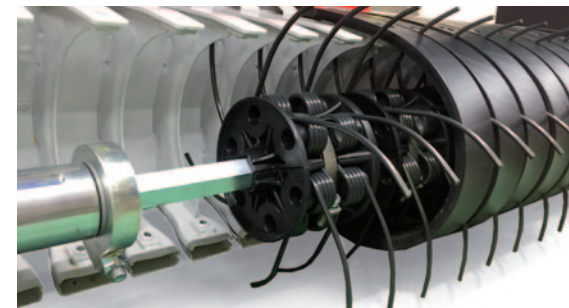

Anti-loss System


unique tine mounting, a screw attaches six tines. Tines can not be lost anymore.




Double bearing

labyrinth seal 1: slit between tine-holder and bearing shell.

labyrinth seal 2: metallic centrifugal disc prevents the entry of dirt and blades of grass to the bearings, simple, robust, maintenance-free.

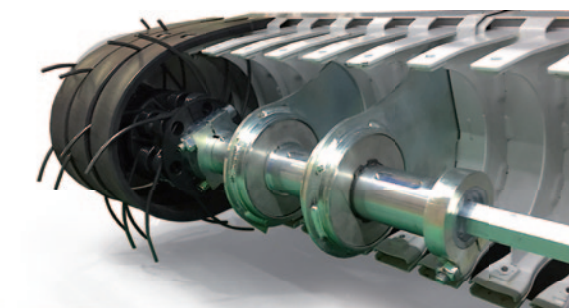

RESPIRO – The pick-up: flexible, camless, slim, robust,

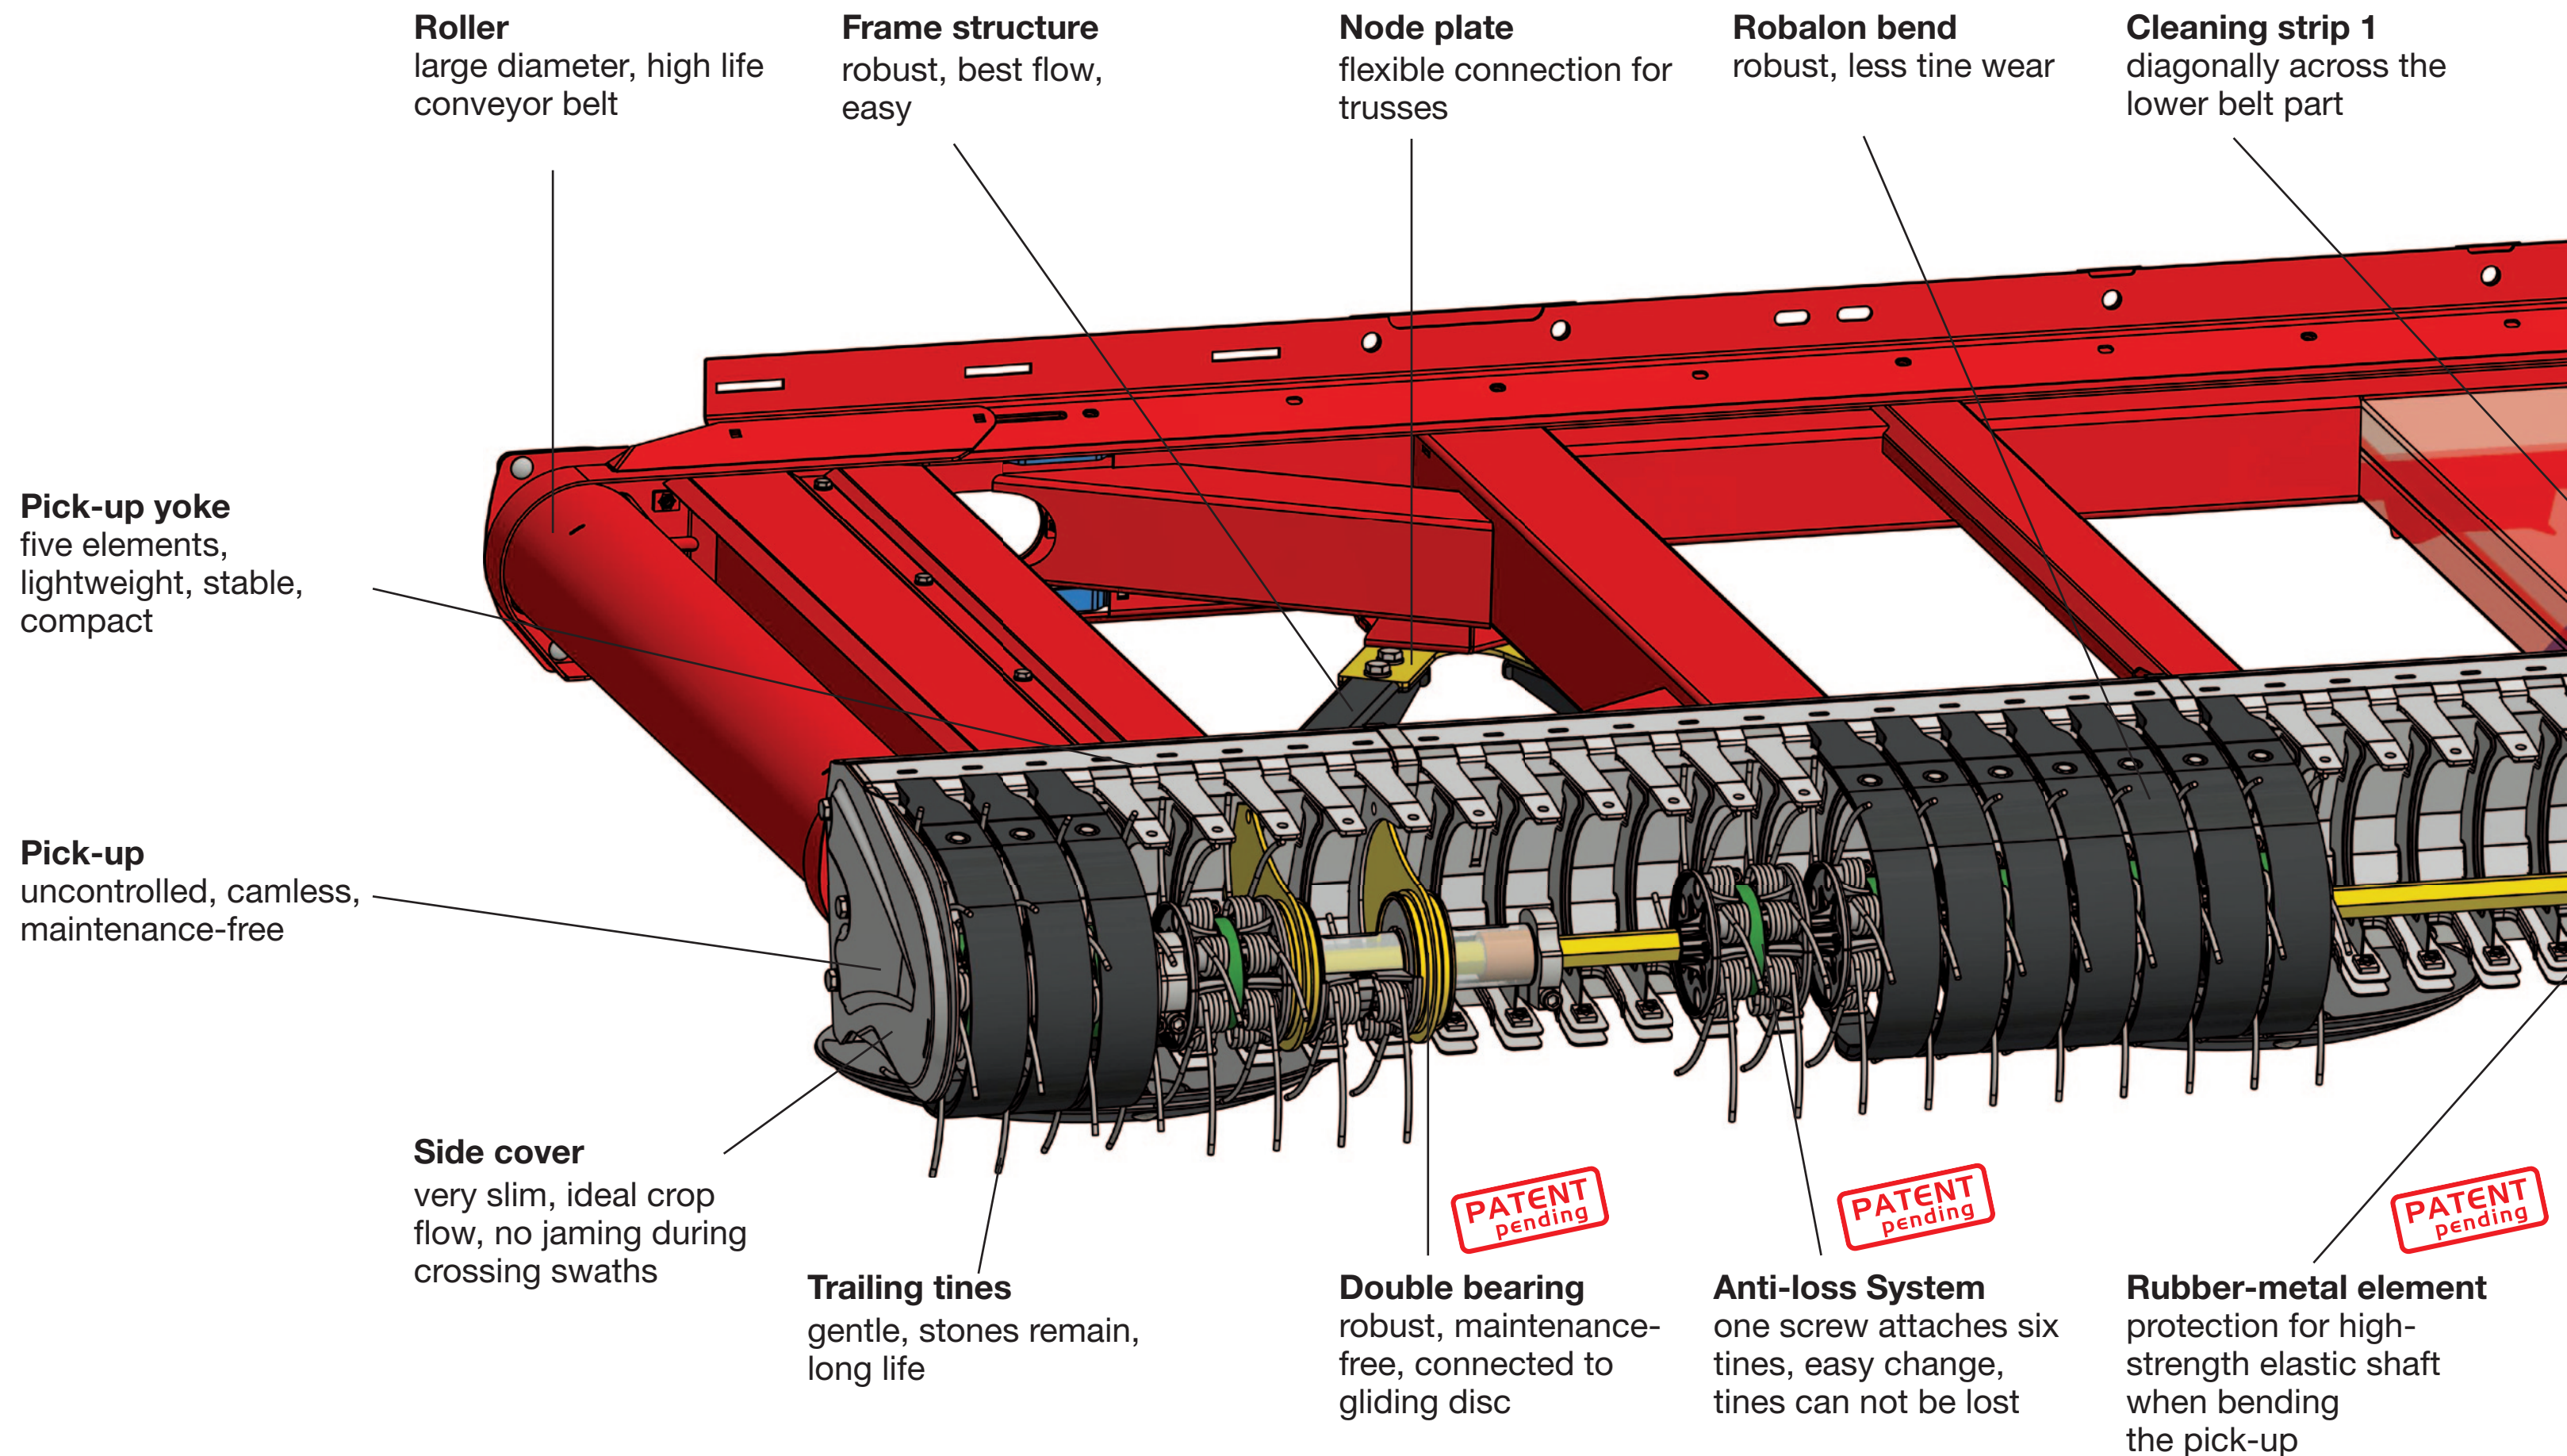

maintenance-free, low-wear, unique

